


CAPEX 40 – 60

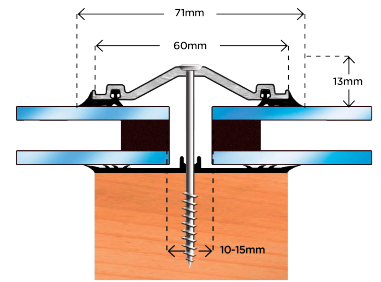

1. Remove the rubber seals from the aluminium.
2. Next cut the aluminium to the required length with a hacksaw.
3. Then cut the rubber seals to the same length as the aluminium and reinsert into the grooves.
4. Position the capping profile on the glazing material.
5. If it is being fixed to hardwood drill pilot holes then screw into place.
6. Finally fix endcap into position.